

## NETWORK SETUP

### 1) on NVR

Enable DHCP

Menu -> System Configuration -> Network -> General

Enable HIK-Connect

Menu -> System Configuration -> Network -> Platform Access

Enable UPNP

Menu -> System Configuration -> Network -> NAT

### 2) Download APP & Register



#### iOS

HIK-Connect <https://apps.apple.com/ca/app/hik-connect/id1087803190>


HiLookVision <https://apps.apple.com/ca/app/hilookvision/id1340663087>

#### Andriod




HIK-Connect <https://appstore.hikvision.com/0yGe>

HiLookVision [https://play.google.com/store/apps/details?id=com.mcu.hilook&hl=en\\_CA](https://play.google.com/store/apps/details?id=com.mcu.hilook&hl=en_CA)

### Register an account

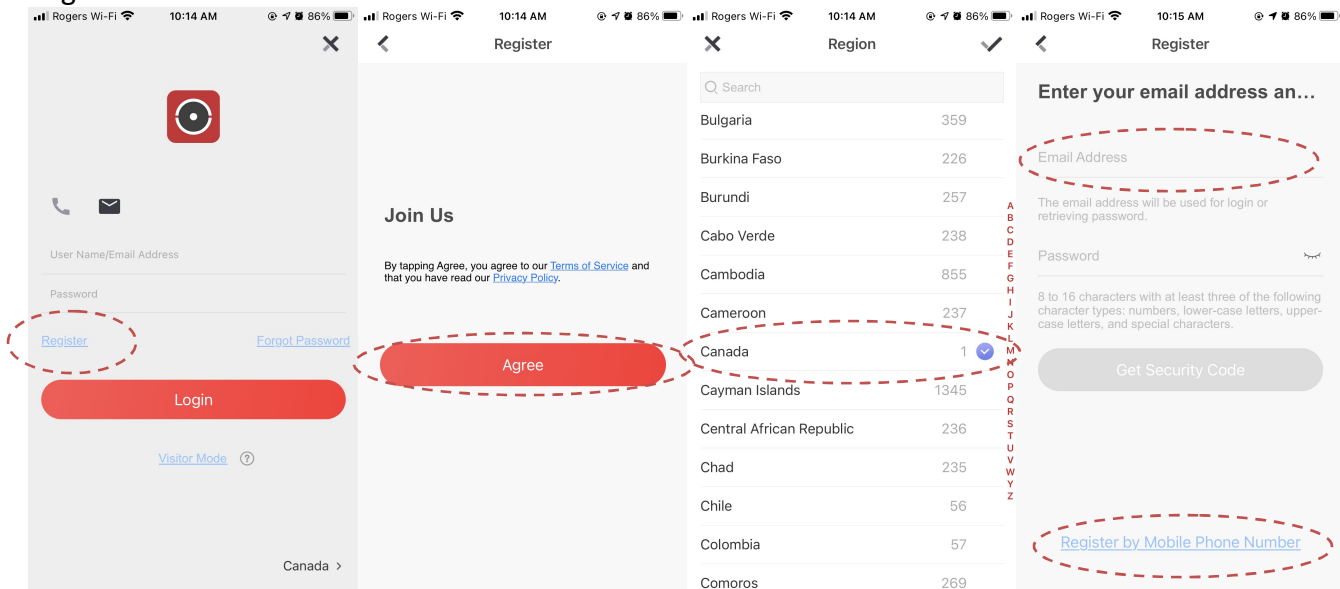

Add Device by QR Code (under System information), Bar code (sticker), OR manually enter the serial number.

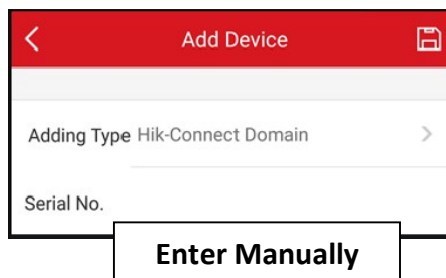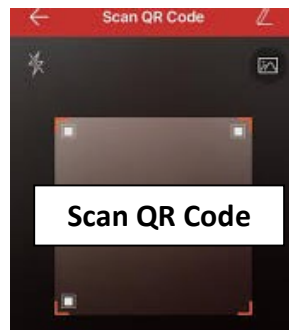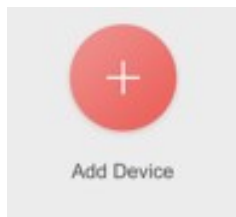

### 3) Remote Login

Download HIK-Connect APP (Free), and Enter your HIK-Connect account name and password